



DMX CHART – LUXIBEL B 25

1 Channel Mode

Channel	Number	Function
CH1	000-007	No function
	008-022	Show 1
	023-037	Show 2
	038-052	Show 3
	053-067	Show 4
	068-082	Show 5
	083-097	Show 6
	098-112	Show 7
	113-127	Show 8
	128-142	Show 9
	143-157	Show 10
	158-172	Show 11
	173-187	Show 12
	188-202	Show 13
	203-217	Show 14
	218-232	Show 15
	233-247	Show 16
248-255	Sound Mode	

4 Channel Mode

Channel	Number	Function
CH1	000-255	R dimmer – brightness 0-100%
CH2	000-255	G dimmer – brightness 0-100%
CH3	000-255	B dimmer – brightness 0-100%
CH4	000-255	A dimmer – brightness 0-100%

5 Channel Mode

Channel	Value	Function	Channel	Value	Function	Value	Function
CH1	000-007	Off					
	008-067	On					
	068-127	Number Show - Start Mode	CH2	000-024	0	125-149	5
				025-049	1	150-174	6
				050-074	2	175-199	7
				075-099	3	200-224	8
				100-124	4	225-255	9
	128-187	Letter Show - Start Mode	CH2	000-009	A	130-139	N
				010-019	B	140-149	O
				020-029	C	150-159	P
				030-039	D	160-169	Q
				040-049	E	170-179	R
				050-059	F	180-189	S
				060-069	G	190-199	T
				070-079	H	200-209	U
				080-089	I	210-219	V
				090-099	J	220-229	A
				100-109	K	230-239	X
				110-119	L	240-249	Y
	188-247	Sound control mode 1	CH2	000-016	Effect 1	136-152	Effect 9
017-033				Effect 2	153-169	Effect 10	
034-050				Effect 3	170-186	Effect 11	
051-067				Effect 4	187-203	Effect 12	
068-084				Effect 5	204-220	Effect 13	
085-101				Effect 6	221-237	Effect 14	
102-118				Effect 7	238-255	Effect 15	
119-135				Effect 8			
248-255	Sound control mode 2 (stand alone)						
CH3	000-255	LED Colour select					
CH4	000-255	Dimmer - 0-100%					
CH5	000-255	Strobe speed, slow to fast					

25 Channel Mode

Channel	Value	Function
CH1	000-255	1st LED colour choice
CH2	000-255	2nd LED colour choice
CH3	000-255	3rd LED colour choice
CH4	000-255	4th LED colour choice
CH5	000-255	5th LED colour choice
CH6	000-255	6th LED colour choice
CH7	000-255	7th LED colour choice
CH8	000-255	8th LED colour choice
CH9	000-255	9th LED colour choice
CH10	000-255	10th LED colour choice
CH11	000-255	11th LED colour choice
CH12	000-255	12th LED colour choice
CH13	000-255	13th LED colour choice
CH14	000-255	14th LED colour choice
CH15	000-255	15th LED colour choice
CH16	000-255	16th LED colour choice
CH17	000-255	17th LED colour choice
CH18	000-255	18th LED colour choice
CH19	000-255	19th LED colour choice
CH20	000-255	20th LED colour choice
CH21	000-255	21st LED colour choice
CH22	000-255	22nd LED colour choice
CH23	000-255	23rd LED colour choice
CH24	000-255	24th LED colour choice
CH25	000-255	25th LED colour choice

75 Channel Mode

Channel	Value	Function
CH1	000-255	1st LED, R Dimmer, Brightness 0-100%
CH2	000-255	1st LED, G Dimmer, Brightness 0-100%
CH3	000-255	1st LED, B Dimmer, Brightness 0-100%
CH4	000-255	2nd LED, R Dimmer, Brightness 0-100%
CH5	000-255	2nd LED, G Dimmer, Brightness 0-100%
CH6	000-255	2nd LED, B Dimmer, Brightness 0-100%
CH7-CH75	000-255	3rd ... 25th LED, R-G-B Brightness

100 Channel Mode

Channel	Value	Function
CH1	000-255	1st LED, R Dimmer, Brightness 0-100%
CH2	000-255	1st LED, G Dimmer, Brightness 0-100%
CH3	000-255	1st LED, B Dimmer, Brightness 0-100%
CH4	000-255	1st LED, A Dimmer, Brightness 0-100%
CH5	000-255	2nd LED, R Dimmer, Brightness 0-100%
CH6	000-255	2nd LED, G Dimmer, Brightness 0-100%
CH7	000-255	2nd LED, B Dimmer, Brightness 0-100%
CH8	000-255	2nd LED, A Dimmer, Brightness 0-100%
CH9-CH100	000-255	3rd ... 25th LED, R-G-B Brightness

105 Channel Mode

Channel	Value	Function	Channel	Value	Function	Value	Function
CH1	000-007	Off					
	008-067	On					
	068-127	Number Show	CH2	000-024	0	125-149	5
				025-049	1	150-174	6
				050-074	2	175-199	7
				075-099	3	200-224	8
				100-124	4	225-255	9
	128-187	Letter show	CH2	000-009	A	130-139	N
				010-019	B	140-149	O
				020-029	C	150-159	P
				030-039	D	160-169	Q
				040-049	E	170-179	R
				050-059	F	180-189	S
				060-069	G	190-199	T
				070-079	H	200-209	U
				080-089	I	210-219	V
				090-099	J	220-229	A
				100-109	K	230-239	X
				110-119	L	240-249	Y
				120-129	M	250-255	Z
	188-247	Sound control mode 1	CH2	000-016	Effect 1	136-152	Effect 9
				017-033	Effect 2	153-169	Effect 10
				034-050	Effect 3	170-186	Effect 11
				051-067	Effect 4	187-203	Effect 12
				068-084	Effect 5	204-220	Effect 13
				085-101	Effect 6	221-237	Effect 14
				102-118	Effect 7	238-255	Effect 15
				119-135	Effect 8		

	248-255	Sound control mode 2 (stand alone)
CH3	000-255	LED Colour select
CH4	000-255	Dimmer, 0-100%
CH5	000-255	Strobe speed, slow to fast
CH6	000-255	1st LED, G Dimmer, brightness 0-100%
CH7	000-255	1st LED, B Dimmer, brightness 0-100%
CH8	000-255	1st LED, A Dimmer, brightness 0-100%
CH9	000-255	2nd LED, R Dimmer, brightness 0-100%
CH10	000-255	2nd LED, G Dimmer, brightness 0-100%
CH11	000-255	2nd LED, B Dimmer, brightness 0-100%
CH12	000-255	2nd LED, A Dimmer, brightness 0-100%
CH13- CH105	000-255	3rd ... 25th LED, R-G-B brightness