



## DMX CHART – LUXIBEL B EXPO200MCW

### 1 Channel Mode

Channel	Value	Function
CH 1	0-255	Dimmer Coarse

### 4 Channel Mode

Channel	Value	Function
CH 1	0-255	Dimmer Coarse
CH 2	0-255	Dimmer Fine
CH 3	0-88	Auto
	89-172	Theatre
	173-255	High
CH 4	0-50	600 Hz
	51-101	1200 Hz
	102-152	2000 Hz
	153-203	2400 Hz
	204-255	4000 Hz

### 5 Channel Mode

Channel	Value	Function
CH 1	0-255	Dimmer Coarse
CH 2	0-255	Dimmer Fine
CH 3	0-5	Strobe Open
	6-127	Strobe effect slow to fast
	128-255	Random strobe effect slow to fast
CH 4	0-88	Auto
	89-172	Theatre
	173-255	High
CH 5	0-50	600 Hz
	51-101	1200 Hz
	102-152	2000 Hz
	153-203	2400 Hz
	204-255	4000 Hz