



DMX CHART – LUXIBEL B EXPO500ATW

Channel			Name	Function	Min DMX	Max DMX
8 CH	9 CH	12 CH	Main			
1	1	1	Dimmer	0->100%	0	255
	2	2	DimmerFine	0->100%	0	255
2	3	3	CCT	2800K - 6000K	0	255
3	4	4	Zoom	Small angle -> Big angle	0	255
4	5	5	Tilt		0	255
5	6	6	TiltFine		0	255
6	7	7	Pan		0	255
7	8	8	PanFine		0	255
		9	Strobe	Strobe open	0	5
				Strobe effect slow to fast	6	127
				Random strobe effect slow to fast	128	255
		10	Fans Mode	Auto	0	84
				Theatre	85	169
				High	170	255
		11	Frequency	600Hz	0	36
				1200Hz	37	72
				2000Hz	73	108
				2400Hz	109	144
				4000Hz	145	180
				16KHz	184	216
				18KHz	217	255
8	9	12	Remote	Lock Remote controller	0	127
				UnLock Remote controller	128	255