



## DMX CHART – LUXIBEL B EXPO500ATW

### 8-Channel Mode

Channel	Number	Function
CH1	0-255	Coarse Dimmer
CH2	0-255	CCT: 2800K – 6000K
CH3	0-255	Zoom
CH4	0-255	Tilt
CH5	0-255	Fine Tilt
CH6	0-255	Pan
CH7	0-255	Fine Pan
CH8	0-127 128-255	Lock Remote Unlock Remote

### 9-Channel Mode

Channel	Number	Function
CH1	0-255	Coarse Dimmer
CH2	0-255	Fine Dimmer
CH3	0-255	CCT: 2800K – 6000K
CH4	0-255	Zoom
CH5	0-255	Tilt
CH6	0-255	Fine Tilt
CH7	0-255	Pan
CH8	0-255	Fine Pan
CH9	0-127 128-255	Lock Remote Unlock Remote

### 12-Channel Mode

Channel	Number	Function
CH1	0-255	Coarse Dimmer
CH2	0-255	Fine Dimmer
CH3	0-255	CCT: 2800K – 6000K
CH4	0-255	Zoom
CH5	0-255	Tilt

CH6	0-255	Fine Tilt
CH7	0-255	Pan
CH8	0-255	Fine Pan
CH9	0-5 6-127 128-255	Strobe Open Strobe effect slow to fast Random strobe effect slow to fast
CH10	0-84 85-169 170-255	Fan Mode: Auto Fan Mode: Silent Fan Mode: High
CH11	0-0 1-50 51-101 102-152 153-203 204-255	No Function Frequency Preset: 600 Hz Frequency Preset: 1200 Hz Frequency Preset: 2000 Hz Frequency Preset: 2400 Hz Frequency Preset: 4000 Hz
CH12	0-127 128-255	Lock Remote Unlock Remote