



## DMX CHART – LUXIBEL B EXPO100MWW

1/4/7 channels

### 1 Channel Mode

Channel	Name	Value	Function
CH 1		0-255	Dimmer Coarse

### 4 Channel Mode

Channel	Name	Value	Function
CH 1		0-255	Dimmer Coarse
CH 2		0-255	Dimmer Fine
CH 3	Fans Mode	0-9	No function
		10-70	Auto
		71-119	No function
		120-160	Silent
		161-179	No function
		180-220	High
		221-255	No function
CH 4	Frequency	0-9	No function
		10-50	600 Hz
		51-59	No function
		60-100	1200 Hz
		101-109	No function
		110-150	2000 Hz
		151-159	No function
		160-200	2400 Hz
		201-209	No function
		210-250	4000 Hz
		251-255	No function

### 5 Channel Mode

Channel		Value	Function
<i>CH 1</i>		0-255	Dimmer Coarse
CH 2		0-255	Dimmer Fine
CH 3		0-5	Strobe Open
		6-127	Strobe effect slow to fast
		128-255	Random strobe effect slow to fast
CH 4	Fans Mode	0-9	No function
		10-70	Auto
		71-119	No function
		120-160	Silent
		161-179	No function
		180-220	High
		221-255	No function
CH 5	Frequency	0-9	No function
		10-50	600 Hz
		51-59	No function
		60-100	1200 Hz
		101-109	No function
		110-150	2000 Hz
		151-159	No function
		160-200	2400 Hz
		201-209	No function
		210-250	4000 Hz
		251-255	No function