75CH

Channel	Value	Function	
CH1	000-255	First LED, R Dimmer, brightness 0-100%	
CH2	000-255	First LED, G Dimmer, brightness 0-100%	
CH3	000-255	First LED, B Dimmer, brightness 0-100%	
CH4	000-255	Second LED, R Dimmer, brightness 0-100%	
CH5	000-255	Second LED, G Dimmer, brightness 0-100%	
CH6	000-255	Second LED, B Dimmer, brightness 0-100%	
CH7-CH75	000-255	ThirdTwenty-fifth LED,R-G-B brightness	

100CH

Channel	Value	Function	
CH1	000-255	First LED, R Dimmer, brightness 0-100%	
CH2	000-255	First LED, G Dimmer, brightness 0-100%	
CH3	000-255	First LED, B Dimmer, brightness 0-100%	
CH4	000-255	First LED, W Dimmer, brightness 0-100%	
CH5	000-255	Second LED, R Dimmer, brightness 0-100%	
CH6	000-255	Second LED, G Dimmer, brightness 0-100%	
CH7	000-255	Second LED, B Dimmer, brightness 0-100%	
CH8	000-255	Second LED, W Dimmer, brightness 0-100%	
CH9-CH100	000-255	ThirdTwenty-fifth LED,R-G-B brightness	


In Product Statement

 This product is in good performance situation and completely packed before leaving factory. Users should be strictly abide by the below cautions and operation instructions, any damage caused by misuse is not within the company warranty;
There is no notice for the change of the technology information in the manual, or the upgrading of the product.

LED Matrix Blinder


(25*10W RGBA 4in1 LED)



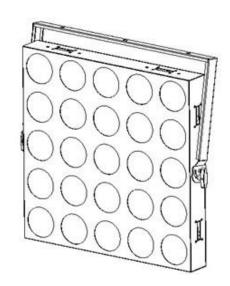

B 25 User Manual

Please read the instructions carefully

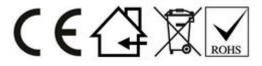

I.Safety Instruction



Keep this equipment away from rain, moisture and liquids.

CAUTION!



1.1. When opening the packing, take all accessories out, and remove the light to a horizontal table for good operation. First check whether the accessories are complete, then check carefully whether the whole light has no damage. If there is any damage, please contact us as soon as possible.

1.2. AC Power: Check whether the local power supply is accordance with the requirements of the product rated voltage.

1.3. The product is only suitable for indoor working environment. The light should keep dry, keep away from wet, overheat or dusty environment. Don't come into contact with water and other liquids to prevent or reduce the risk of electric shock or fire.

1.4. Please do not install the light directly on the surface of the combustible substance.

1.5. The people who install, operate and maintain of light professional certificate required.

1.6. When there are faults of the light, please stop using the light immediately. Don't try to repair, please contact the nearest authorized technical assistance center, if the parts damage, always use the same type of parts replaced.

1.7. Don't touch any electrical wiring in the process of operation to prevent the risk of electric shock.

1.8. To make sure the light working environment temperature, the highest do not exceed 40 °C, the lowest do not exceed - 20 °C.

1.9. Under the stable cooling working situation, the highest temperature of the housing of the light can reach 80 $^{\circ}$ C, please do not touch.

1.10. The light is design according to the type of electric shock protection. The light should be use in good connection grounding power system and the ground wire must connect with the ground wire of the power supply system. The earth sign port of the light should be connected to the installing fixtures.

25CH

een			
Channel	Value	Function	
CH1	000-255	First LED color choose	
CH2	000-255	Second LED color choose	
CH3	000-255	Third LED color choose	
CH4	000-255	Fourth LED color choose	
CH5	000-255	Fifth LED color choose	
CH6	000-255	Sixth LED color choose	
CH7	000-255	Seventh LED color choose	
CH8	000-255	Eighth LED color choose	
CH9	000-255	Ninth LED color choose	
CH10	000-255	Tenth LED color choose	
CH11	000-255	Eleventh LED color choose	
CH12	000-255	Twelfth LED color choose	
CH13	000-255	Thirteenth LED color choose	
CH14	000-255	Fourteenth LED color choose	
CH15	000-255	Fifteenth LED color choose	
CH16	000-255	Sixteenth LED color choose	
CH17	000-255	Seventeenth LED color choose	
CH18	000-255	Eighteenth LED color choose	
CH19	000-255	Nineteenth LED color choose	
CH20	000-255	Twentieth LED color choose	
CH21	000-255	Twenty -first LED color choose	
CH22	000-255	Twenty -second LED color	
CH23	000-255	Twenty -third LED color choose	
CH24	000-255	Twenty -fourth LED color choose	
CH25	000-255	Twenty -fifth LED color choose	

5CH

Cha		Functi					
nnel	Value	on	Chan .				Functio
	000-007	off	nel	Value	Function	Value	n
	008-067	On	псі				п
	000-007	011		000.004	0	405 440	5
		Number Show Start mode	CH2	000-024		125-149	
	000 407			025-049	1	150-174	6 7
	068-127			050-074		175-199	
				075-099	3	200-224	8
				100-124	4	225-255	9
				000-009	A	130-139	N
				010-019	B	140-149	0
				020-029	С	150-159	P
				030-039	D	160-169	Q
		Letter show Start mode	CH2	040-049	E	170-179	R
	128-187			050-059	F	180-189	S
				060-069	G	190-199	Т
CH1				070-079	Н	200-209	U
				080-089	l	210-219	V
				090-099	J	220-229	W
				100-109	K	230-239	Х
				110-119	L	240-249	Y
				120-129	М	250-255	Z
		Sound control mode 1	CH2	000-016	Effect 1	136-152	Effect 9
				017-033	Effect 2	153-169	Effect
				034-050	Effect 3	170-186	Effect 11
	188-247			051-067	Effect 4	187-203	Effect
				068-084	Effect 5	204-220	Effect
				085-101	Effect 6	221-237	Effect
				102-118	Effect 7	238-255	Effect
				119-135	Effect 8		
	248-255	Sound control mode 2 (stand alone)					
CH3	000-255	LED Color select					
CH4	000-255	Dimmer, 0-100%					
CH5	000-255	Strobe speed, slow to fast					

1.11. Do not use the damage of the insulating layer wire and also do not use the power cord overlap on the other wire. When not in use or clean the light, please disconnect the power, don't pull the plug in hard or just drag the wires.

1.12. There are no components inside for maintenance. Before start operation the light, please check whether all of the shell is installed. In the case of the shell open used the light is prohibited.

Note: Under any installation, maintenance and clean the light, please confirm that has cut off the power cord!



II. Product Specification

1.Channel:1CH,4CH,5CH,25CH,75CH and 100CH;

- 2.Control mode:Sound active, LED Auto run, DMX and Master/slave
- 3. DMX512, Auto run, Sound active, software computer control.
- 4. Can make as a wall for background.
- 5. LED self test: R-G-B-A-RGBA
- 6. LED display, easy to control
- 7. Voltage: AC100-240V 50/60HZ
- 8. Power: 200W
- 9. Light source: 25pcs 10W RGBA 4in 1 LED
- 10. Fuse: F5A 250V
- 11. Size: 58x58x12CM

12.Weight:13kg

VII. Chanel mode instruction (choose ROOI) default address

DISPLAY 5 6 0 0 Q 0

ltem	Seq.	Display	Function		
	1	MENU		Enter the menu	
Dutton	2	DOWN		Next the menu	
Button: 3		UP	Previous menu		
	(4)	ENTER	Enter the select function		
	(5)	DMX	Strobe	DMX In	
LED	6	SLAVE	Strobe	Slave mode	
	7	MASTER	Strobe	Master mode	
	8	SOUND	Strobe	Sound mode	

IV.LED display function:

Choose a function, press MENU button, choose the menu. Press ENTER button enter the chosen function, LED display strobe, then press UP/DOWN button to choose the function, press ENTER button to confirm. Or wait for 10 seconds or press the **MENU** long time, then could enter the main mode.


Main function as follows:

1CH

ICH				
Channel	Value	Function	Value	Function
	000-007	Off	128-142	Show 9
	008-022	Show 1	143-157	Show 10
	023-037	Show 2	158-172	Show 11
	038-052	Show 3	173-187	Show 12
CH1	053-067	Show 4	188-202	Show 13
	068-082	Show 5	203-217	Show 14
	083-097	Show 6	218-232	Show 15
	098-112	Show 7	233-247	Show 16
	113-127	Show 8	248-255	Sound mode

4CH

Channel	Value	Function
CH1	000-255	R Dimmer, brightness 0-100%
CH2	000-255	G Dimmer, brightness 0-100%
CH3	000-255	B Dimmer, brightness 0-100%
CH4	000-255	W Dimmer, brightness 0-100%

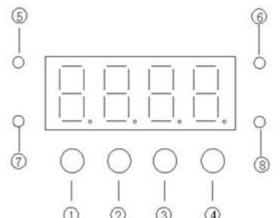

13. Hour Working time

Press **MENU** button to **hour**, press **ENTER** button, the led display could show the working time, press **MENU** back to main menu.

14. UPr Version

Press MENU button to UP, press ENTER buttoon, the led display could show the software version, press MENU back to main menu.

VI. How to operation

- 1. Master/slave mode to control.
- 2. DMX controller

Master/slave mode function

All light is master at the beginning **CRSE**, Connect the lights, One to be master and the other is slave. If there are no DMX signal, the master mode LED will light up, the sound control LED will strobe according to the music, the other light will readjustment the master light. when connect the DMX cable, the slave LED will light up.


Two Light

For the slave light, slave 1 (\underline{SLI}) running same as the master light, slave 2 ($\underline{SL2}$) running against the master light. If there are just two light, could set the second light as slave light ($\underline{SL2}$) for better show.

DMX Controller

If control by DMX controller, then you need to set the address code to control the light, the address code value is 1-512, the light could receive the signal accordingly.

Press MENU button, select Rddr menu, press ENTER button, address will strobe.Use UP /DOWN to select DMX512 address. After address ensure, press ENTER button, until address stop strobe, After 8 seconds will return the menu. If return the former but not change, press the menu button.

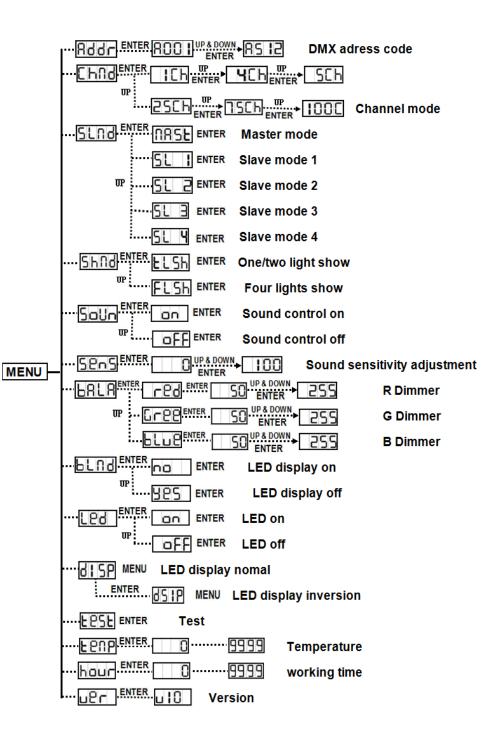

V. LED display function:

1. Rddr DMX512 Address Setting

Chose **Addr**, press **ENTER** button to confirm. Press **UP/DOWN** button to initial address, and press **ENTER** button to save, After 10seconds or press **MENU** long time to return to main menu.

2. Child Channel Mode

ose Child press ENTER button to

Choose **Lhnd**, press **ENTER** button to confirm. Press **UP/DOWN** to choose the channel, like **ICH** (1 channel) or **MCH** (4 channel) or **SCH** (5 channel) or **SCH** (5 channel) or **SCH** (25 channel) or **SCH** (75 channel) mode,etc. Press **ENTER** button to save it. After 10seconds or press **MENU** long time to return to main menu.

3. SLIND Slave mode

Choose <u>SLIN</u>, press **ENTER** button to enter, <u>INASE</u> (Master) or <u>SLIN</u> (slave 1) or <u>SLIN</u> (slave 2) or <u>SLIN</u> (slave 3) or <u>SLIN</u> (slave 4) mode. Press **ENTER** button to save, After 10seconds or press **MENU** long time to return to main menu.

4. Shod Show mode

Choose Shind, press ENTER button to confirm. Press UP/DOWN button to chose (One/Two Light Show) or FLSh (Four Light Show) .Press ENTER button to save, After 10seconds or press MENU long time to return to main menu.

5. Sound Control

Choose , press ENTER button to confirm. Press UP/DOWN button to choose or OFF. Press Enter button to save. After 10seconds or press MENU long time to return to main menu.

6. Sens Sound control sensitivity

choose **Sens**, press **ENTER** button to confirm. Press **UP/DOWN** to adjust, the sensitivity value from **to 100**. After chosen, press **ENTER** button to save, after 10seconds or press **MENU** long time to return

7. **BRLR** Manual dimmer

Choose **LALA**, press **ENTER** button to confirm. Show **Condition** (red dimmer), press **ENTER**, use **UP/DOWN** button to add or decrease brightness value, and then, press **MENU** to enter the mode. Choose **UP** show **COND** (green dimmer), press **ENTER**, use **UP/DOWN** button to add or decrease brightness value, and then, press **MENU** to enter the mode. Choose UP show **COND** (blue dimmer), press **MENU** to enter the mode. Choose UP show **COND** (blue dimmer), press **MENU** to enter the mode. After 10seconds or press **MENU** long time to return to main menu.

8. LED display

Choose **ELGO**, press **ENTER** button to confirm. Press **UP/DOWN** button to choose **ID** (light on) or **UPS** (light off) mode. After chosen, press **ENTER** button to save. After 10seconds or press **MENU** long time to return to main menu.

9. LED display

Choose Led, press ENTER button to confirm. Press UP/DOWN button to

choose (display on) or (display off) mode. After chosen, press **ENTER** button to save. After 10 seconds or press **MENU** long time to return to main menu.

10. **DISP** LED display inversion

Choose **DISP**, press **ENTER** button to confirm, then enter the **DSIP** (inversion), after chosen, press **MENU** to enter the mode. After 10seconds or press **MENU** long time to return to main menu.

11. LESE Test

Press MENU button to **LESE**, press **ENTER** button, the led display will strobe, the light will run built in program, press **MENU** to back to main menu.

12. **LENP** Temperature

Press MENU button to **LERP**, press **ENTER** button, the led display will show the temperature, press **MENU** to back to main menu.