




# B BLINDED DMX Chart



## 5 DMX modes

- 1-Channel mode
- 2-Channel mode
- 4-Channel mode
- 6-Channel mode
- 8-Channel mode

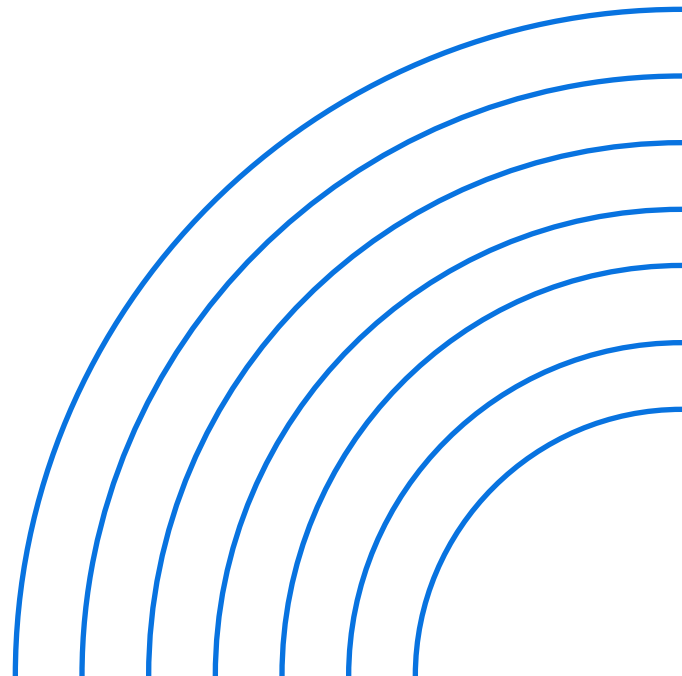

## 1-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer 0-100%	0	255

## 2-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Left Dimmer 0-100%	0	255
2	Dimmer	Right Dimmer 0-100%	0	255

## 4-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Left Dimmer 0-100%	0	255
2	Dimmer	Right Dimmer 0-100%	0	255
3	Dimmer	Dimmer 0-100%	0	255
4	Strobe	Open	0	5
		Strobe Rate, slow-fast	6	123
		Open	124	127
		2 LEDs random strobe at the same time	128	185
		Open	186	190
		2 LEDs random strobe respectively	191	249
		Open	250	255

## 6-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Left Dimmer Coarse 0-100%	0	255
2	Dimmer Fine	Left Dimmer Fine 0-100%	0	255
3	Dimmer	Right Dimmer Coarse 0-100%	0	255
4	Dimmer Fine	Right Dimmer Fine 0-100%	0	255
5	Dimmer	Dimmer 0-100%	0	255
6	Strobe	Open	0	5
		Strobe Rate, slow-fast	6	123
		Open	124	127
		2 LEDs random strobe at the same time	128	185
		Open	186	190
		2 LEDs random strobe respectively	191	249
		Open	250	255

## 8-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Left Dimmer Coarse 0-100%	0	255
2	Dimmer Fine	Left Dimmer Fine 0-100%	0	255
3	Dimmer	Right Dimmer Coarse 0-100%	0	255
4	Dimmer Fine	Right Dimmer Fine 0-100%	0	255

## 8-Channel mode

5	Dimmer	Dimmer 0-100%	0	255
6	Strobe	Open	0	5
		Strobe Rate, slow-fast	6	123
		Open	124	127
		Left LEDs random strobe at the same time	128	185
		Open	186	190
		Left LEDs random strobe respectively	191	249
		Open	250	255
7	Strobe	Open	0	5
		Strobe Rate, slow-fast	6	123
		Open	124	127
		Right LED random strobe at the same time	128	185
		Open	186	190
		Right LED random strobe respectively	191	249
		Open	250	255
8	Dimmer Speed	Default Setting	0	63
		Fast	64	127
		Smooth	128	191
		Tungsten Effect	192	255