




# B EXPO100MWW

## DMX Chart



### 3 DMX modes

- 1 Channel mode
- 4 Channel mode
- 5 Channel mode

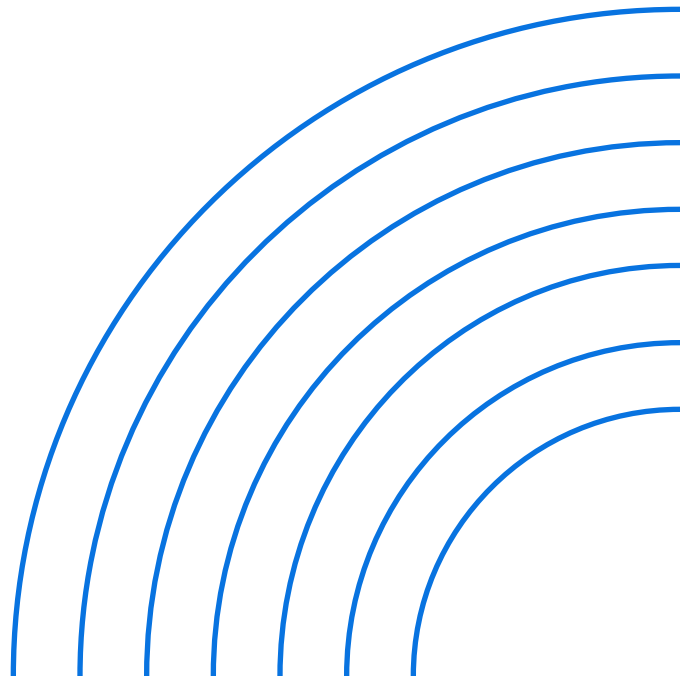

## 1-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer Coarse	0	255

## 4-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer Coarse	0	255
2	Dimmer	Dimmer Fine	0	255
3	Fans Mode	No function	0	9
		Auto	10	70
		No function	71	119
		Silent	120	160
		No function	161	179
		High	180	220
		No function	221	255
4	Frequency	No function	0	9
		600Hz	10	50
		No function	51	59
		1200Hz	60	100
		No function	101	109
		2000Hz	110	150
		No function	151	159
		2400Hz	160	200
		No function	201	209
		4000Hz	210	250
		No function	251	255

## 5-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer Coarse	0	255
2	DimmerFine	Dimmer Fine	0	255
3	Strobe	Strobe open	0	5
		Strobe effect slow to fast	6	127
		Random strobe effect slow to fast	128	255
4	Fans Mode	No function	0	9
		Auto	10	70
		No function	71	119
		Silent	120	160
		No function	161	179
		High	180	220
		No function	221	255
5	Frequency	No function	0	9
		600Hz	10	50
		No function	51	59
		1200Hz	60	100
		No function	101	109
		2000Hz	110	150
		No function	151	159
		2400Hz	160	200
		No function	201	209
		4000Hz	210	250
		No function	251	255