




# **B EXPO350A**

## **DMX Chart**



### **2 DMX modes**

- 8 Channel mode
- 11 Channel mode

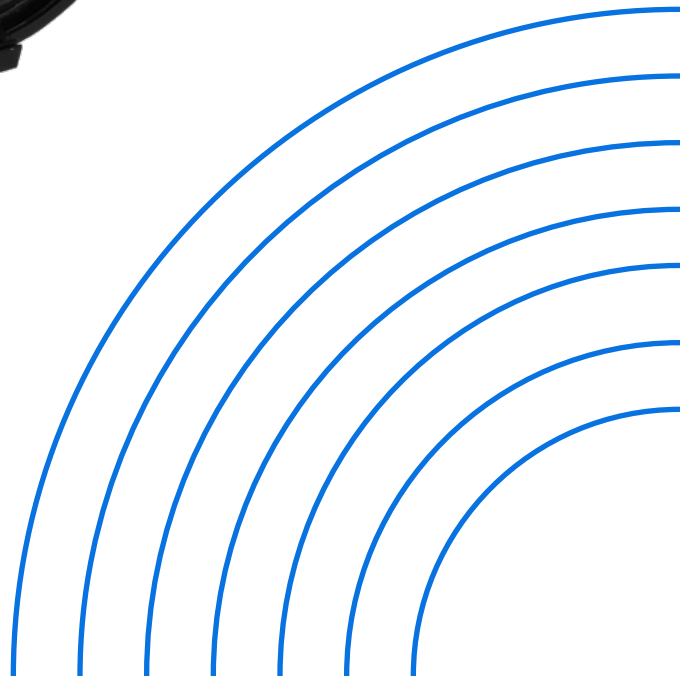

## 8-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Fine Dimmer	0	255
3	Zoom	Zoom	0	255
4	P/T	Tilt	0	255
5	P/T	Fine Tilt	0	255
6	P/T	Pan	0	255
7	P/T	Fine Pan	0	255
8	Remote	"Lock Remote Unlock Remote"	0	255

# 11-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Fine Dimmer	0	255
3	Zoom	Zoom	0	255
4	P/T	Tilt	0	255
5	P/T	Fine Tilt	0	255
6	P/T	Pan	0	255
7	P/T	Fine Pan	0	255
8	Strobe	Strobe Open	0	5
		Strobe effect slow to fast	6	127
		Random Strobe slow to fast	128	255
9	Fan	Auto	0	84
		Silent	85	169
		High	170	255
10	Frequency	No Function	0	0
		600Hz	1	50
		1200Hz	51	101
		2000Hz	102	152
		2400Hz	153	203
		4000Hz	204	255
11	Remote	Lock Remote	0	127
		Unlock Remote	128	255
		4000Hz	210	250
		No function	251	255