




B EXPO500ATW

DMX Chart



3 DMX modes

- 8-Channel mode
- 9-Channel mode
- 12-Channel mode

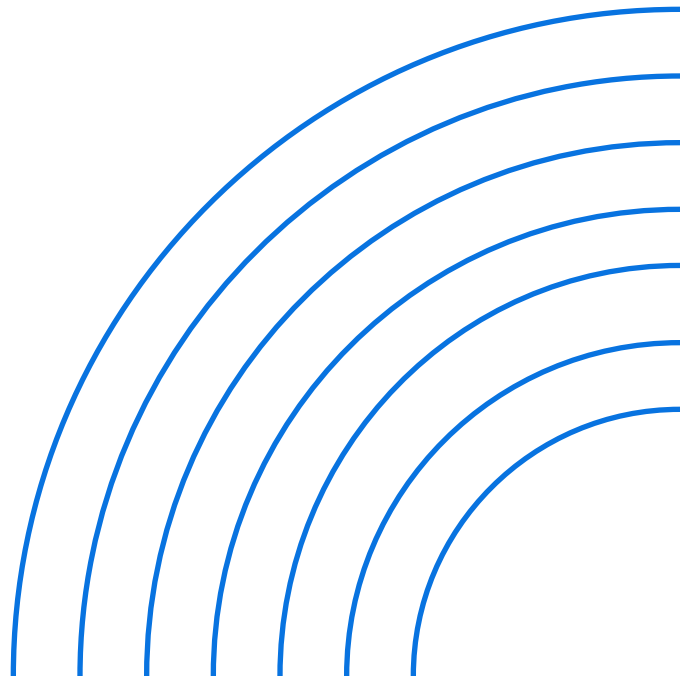

8-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	CCT	2800K	0	18
		3000K	19	36
		3200K	37	54
		3500K	55	72
		3800K	73	90
		4000K	91	108
		4200K	109	126
		4500K	127	144
		4800K	145	162
		5000K	163	180
		5300K	181	198
		5600K	199	216
		5800K	217	234
		6000K	235	255
3	Zoom	Zoom	0	255
4	P/T	Tilt	0	255
5	P/T	Fine Tilt	0	255
6	P/T	Pan	0	255
7	P/T	Fine Pan	0	255
8	Remote	"Lock Remote Unlock Remote"	0	255

9-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Fine Dimmer	0	255
3	CCT	2800K	0	18
		3000K	19	36
		3200K	37	54
		3500K	55	72
		3800K	73	90
		4000K	91	108
		4200K	109	126
		4500K	127	144
		4800K	145	162
		5000K	163	180
		5300K	181	198
		5600K	199	216
		5800K	217	234
		6000K	235	255
4	Zoom	Zoom	0	255
5	P/T	Tilt	0	255
6	P/T	Fine Tilt	0	255
7	P/T	Pan	0	255
8	P/T	Fine Pan	0	255
9	Remote	"Lock Remote Unlock Remote"	0	255

12-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Fine Dimmer	0	255
3	CCT	2800K	0	18
		3000K	19	36
		3200K	37	54
		3500K	55	72
		3800K	73	90
		4000K	91	108
		4200K	109	126
		4500K	127	144
		4800K	145	162
		5000K	163	180
		5300K	181	198
		5600K	199	216
		5800K	217	234
		6000K	235	255
4	Zoom	Zoom	0	255
5	P/T	Tilt	0	255
6	P/T	Fine Tilt	0	255
7	P/T	Pan	0	255
8	P/T	Fine Pan	0	255
9	Strobe	Strobe open	0	5
		Strobe effect slow to fast	6	127
		Random strobe effect slow to fast	128	255
10	Fans Mode	Auto	0	84
		Silent	85	169
		High	170	255

12-Channel mode

11	Frequency	No Function	0	0
		600Hz	1	50
		1200Hz	51	101
		2000Hz	102	152
		2400Hz	153	203
		4000Hz	204	255
12	Remote	"Lock Remote Unlock Remote"	0	255