




B EXPO500TW

DMX Chart



3 DMX modes

- 3-Channel mode
- 4-Channel mode
- 7-Channel mode

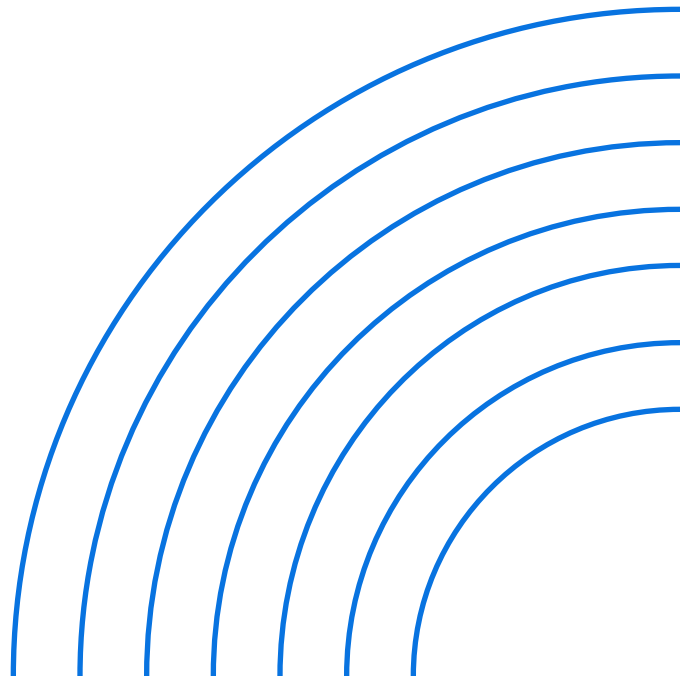

3-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	CCT	2800K	0	18
		3000K	19	36
		3200K	37	54
		3500K	55	72
		3800K	73	90
		4000K	91	108
		4200K	109	126
		4500K	127	144
		4800K	145	162
		5000K	163	180
		5300K	181	198
		5600K	199	216
		5800K	217	234
		6000K	235	255
3	Zoom	Small angle to big angle	0	255

4-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Dimmer Fine	0	255
3	CCT	2800K	0	18
		3000K	19	36
		3200K	37	54
		3500K	55	72
		3800K	73	90
		4000K	91	108
		4200K	109	126
		4500K	127	144
		4800K	145	162
		5000K	163	180
		5300K	181	198
		5600K	199	216
		5800K	217	234
		6000K	235	255
4	Zoom	Small angle to big angle	0	255

7-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Dimmer Fine	0	255
3	CCT	2800K	0	18
		3000K	19	36
		3200K	37	54
		3500K	55	72
		3800K	73	90
		4000K	91	108
		4200K	109	126
		4500K	127	144
		4800K	145	162
		5000K	163	180
		5300K	181	198
		5600K	199	216
		5800K	217	234
		6000K	235	255
4	Zoom	Small angle to big angle	0	255
5	Strobe	Strobe open	0	5
		Strobe effect slow to fast	6	127
		Random strobe effect slow to fast	128	255
6	Fans Mode	Auto	0	84
		Silent	85	169
		High	170	255
7	Frequency	600Hz	0	36
		1200Hz	37	72
		2000Hz	73	108
		2400Hz	109	144

7-channel mode

7	Frequency	4000Hz	145	180
		16Hz	181	216
		18Hz	217	255