



## DMX CHART – LUXIBEL B NARROW

### 10/12/14/16 Channel Mode Sheet

CH 10	CH 12	CH 14	CH 16	Function	Value	Description
CH 1	CH 1	CH 1	CH 1	Pan	0-255	0-540°
		CH 2	CH 2	Pan fine	0-255	Pan Fine
CH 2	CH 2	CH 3	CH 3	Tilt	0-255	0-270°
		CH 4	CH 4	Tilt Fine	0-255	Tilt Fine
CH 3	CH 3	CH 5	CH 5	X,Y speed	0-255	From fast to slow
CH 4	CH 4	CH 6	CH 6	LED Dimmer	0-255	From dark to bright
CH 5	CH 5	Ch 7	CH 7	LED Strobe	0-7	Turn on
					8-250	Strobe from slow to fast
					251-255	Turn on
CH 6	CH 6	CH 8	CH 8	7 colour + White	0-15	White Light
					16-31	Colour 1
					32-47	Colour 2
					48-63	Colour 3
					64-79	Colour 4
					80-95	Colour 5
					96-111	Colour 6
					112-127	Colour 7
					128-191	CW from slow to fast
					192-255	CCW from slow to fast
CH 7	CH 7	CH 9	CH 9	8 Static Gobos + Open	0-6	Open
					7-13	Gobo 1
					14-20	Gobo 2
					21-27	Gobo 3
					28-34	Gobo 4
					35-41	Gobo 5
					42-48	Gobo 6
					49-55	Gobo 7
					56-63	Gobo 8
					64-70	Gobo 8 shake speed from slow to fast
					71-77	Gobo 7 shake speed from slow to fast
					78-84	Gobo 6 shake speed from slow to fast
					85-91	Gobo 5 shake speed from slow to fast
					92-98	Gobo 4 shake speed from slow to fast
					99-105	Gobo 3 shake speed from slow to fast
					106-112	Gobo 2 shake speed from slow to fast
113-119	Gobo 1 shake speed from slow to fast					
120-127	Open					

					128-191	Gobo Rotate CW slow to fast
					192-255	Gobo Rotate CCW slow to fast
	CH 8		CH 10	6 Rotation Gobos + White	0-15	Open
					16-31	Gobo 1
					32-47	Gobo 2
					48-63	Gobo 3
					64-79	Gobo 4
					80-95	Gobo 5
					96-127	Gobo 6
					128-191	Gobo Rotate CW slow to fast
					192-255	Gobo Rotate CCW slow to fast
	CH 9		CH 11		Gobo Rotation	0-15
				16-95		Gobo Fine 0-360
				96-135		Gobo Rotating 0-90
				136-155		Gobo Rotating 0-180
				156-175		Gobo Rotating 0-720
				176-215		Gobo self-rotating CW rotating from slow to fast
				216-255		Gobo self-rotating CCW rotating from slow to fast
CH 8	CH 10	CH 10	CH 12	Focus	0-255	Gobo hazy to clear
CH 9	CH 11	CH 11	CH 13	Prism	0-63	Open
					64-255	Prism in
CH 10	CH 12	CH 12	CH 14	Prism	0-15	Stop
					16-135	Rotate CW slow to fast
					136-255	Rotate CCW slow to fast
		CH 13	CH 15	Self-setting	0-7	No action
					8-131	Auto mode
					132-255	Sound mode
		CH 14	CH 16	Reset	0-249	No function
					250-253	Reset