



## DMX CHART – LUXIBEL B TWO

Mode / Channel		Value	Function
10 ch	8 ch		
1	1		<b>Pan 8 bit</b>
		0-255	Pan movement
2			<b>Pan fine 16 bit</b>
		0-255	Fine control of pan movement
3	2		<b>Tilt 8 bit</b>
		0-255	Tilt movement
4			<b>Tilt fine 16 bit</b>
		0-255	Fine control of tilt movement
5	3		<b>Pan/tilt speed</b>
		0	Maximum speed
		1-255	Speed from maximum to minimum
6	4		<b>Pan motor continuous rotation</b>
		0-127	No function
		128-189	Forwards pan rotation from fast to slow
		190-193	No rotation
		194-255	Backwards pan rotation from slow to fast
7	5		<b>Tilt motor continuous rotation</b>
		0-127	No function
		128-189	Forwards tilt rotation from fast to slow
		190-193	No rotation
		194-255	Backwards tilt rotation from slow to fast
8	6		<b>Shutter strobe</b>
		0-31	LED turn off
		32-63	LED turn on
		64-95	Strobe effect slow to fast
		96-127	LED turn on
			<b>Pulse effect in sequence</b>
		160-191	LED turn on
		192-223	Random strobe effect slow to fast
224-225	LED turn on		
9	7		<b>Dimmer intensity</b>
		0-255	Dimmer intensity from 0% to 100%
10	8		<b>Reset, internal auto</b>
		0-79	Normal
		80-84	All motor reset
		85-99	No function
		100-119	Internal auto 1
		120-139	Internal auto 2
		140-159	Internal auto 3

		160-179	Internal auto 4
		180-199	Internal auto 5
		200-219	Internal auto 6
		220-239	Internal auto 7
		240-255	Internal auto 8