




B 25

DMX Chart



7 DMX modes

- 1-Channel mode
- 4-Channel mode
- 5-Channel mode
- 25-Channel mode
- 75-Channel mode
- 100-Channel mode
- 105-Channel mode

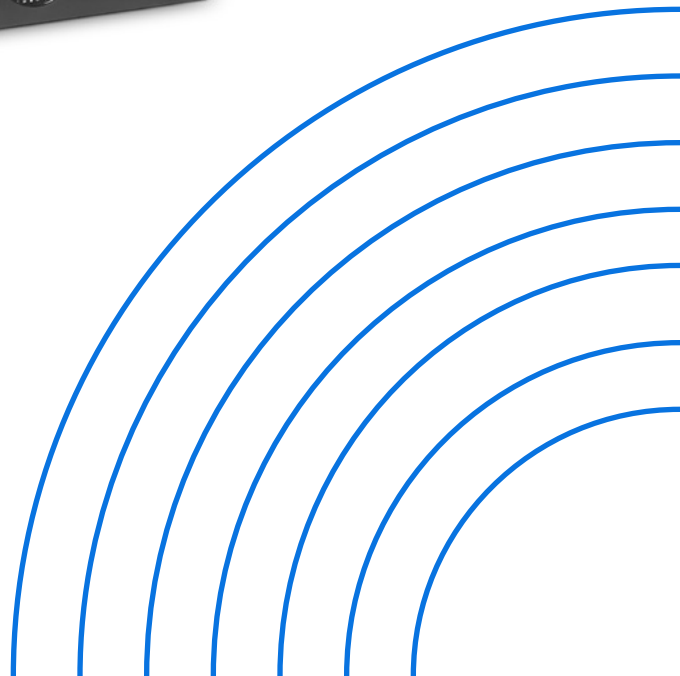

1-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Show Macro (all affected by sound, except in NO function)	No Function	0	7
		Show 1	8	22
		Show 2	23	37
		Show 3	38	52
		Show 4	53	67
		Show 5	68	82
		Show 6	83	97
		Show 7	98	112
		Show 8	113	127
		Show 9	128	142
		Show 10	143	157
		Show 11	158	172
		Show 12	173	187
		Show 13	188	202
		Show 14	203	217
		Show 15	218	232
		Show 16	233	247
		Sound active, the static to performance	248	255

4-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Red	Red 0-100%	0	255
2	Green	Green 0-100%	0	255
3	Blue	Blue 0-100%	0	255
4	Amber	Amber 0-100%	0	255

5-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Control	OFF	0	255
	Control	ON	0	255
	Number Macros	Number Show - Start Mode	0	255
	Letter Macros	Letter Show - Start mode	0	255
	Control	Sound Control - mode 1	0	255
	Control	Sound Control - mode 2	0	255
2	Number Macro 1	0	0	24
	Number Macro 2	1	25	49
	Number Macro 3	2	50	74
	Number Macro 4	3	75	99
	Number Macro 5	4	100	124
	Number Macro 6	5	125	149
	Number Macro 7	6	150	174
	Number Macro 8	7	175	199
	Number Macro 9	8	200	224
	Number Macro 10	9	225	255

5-Channel mode

Channel	Name	Function	Min DMX	Max DMX
2	Letter Macro 1	A	0	9
	Letter Macro 2	B	10	19
	Letter Macro 3	C	20	29
	Letter Macro 4	D	30	39
	Letter Macro 5	E	40	49
	Letter Macro 6	F	50	59
	Letter Macro 7	G	60	69
	Letter Macro 8	H	70	79
	Letter Macro 9	I	80	89
	Letter Macro 10	J	90	99
	Letter Macro 11	K	100	109
	Letter Macro 12	L	110	119
	Letter Macro 13	M	120	129
	Letter Macro 14	N	130	139
	Letter Macro 15	O	140	149
	Letter Macro 16	P	150	159
	Letter Macro 17	Q	160	169
	Letter Macro 18	R	170	179
	Letter Macro 19	S	180	189
	Letter Macro 20	T	190	199
	Letter Macro 21	U	200	209
	Letter Macro 22	V	210	219
	Letter Macro 23	W	220	229
	Letter Macro 24	X	230	239
	Letter Macro 25	Y	240	249
	Letter Macro 26	Z	250	255
	Sound Effect Macro 1	Sound Effect 1	0	16

5-Channel mode

Channel	Name	Function	Min DMX	Max DMX
2	Sound Effect Macro 2	Sound Effect 2	17	33
	Sound Effect Macro 3	Sound Effect 3	34	50
	Sound Effect Macro 4	Sound Effect 4	51	67
	Sound Effect Macro 5	Sound Effect 5	68	84
	Sound Effect Macro 6	Sound Effect 6	85	101
	Sound Effect Macro 7	Sound Effect 7	102	118
	Sound Effect Macro 8	Sound Effect 8	119	135
	Sound Effect Macro 9	Sound Effect 9	136	152
	Sound Effect Macro 10	Sound Effect 10	153	169
	Sound Effect Macro 11	Sound Effect 11	170	186
	Sound Effect Macro 12	Sound Effect 12	187	203
	Sound Effect Macro 13	Sound Effect 13	204	220
	Sound Effect Macro 14	Sound Effect 14	221	237
	Sound Effect Macro 15	Sound Effect 15	238	255
3	Colour	Colour select (Red towards white over the spectrum)	0	255
4	Dimmer	Dimmer (All)	0	255
5	Strobe Speed	Slow to Fast	0	255

25-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Colour	First light (Red towards white over the spectrum)	0	255
2	Colour	Second Light (Red towards white over the spectrum)	0	255
3	Colour	Third Light (Red towards white over the spectrum)	0	255
4	Colour	Fourth Light (Red towards white over the spectrum)	0	255
5	Colour	Fifth Light (Red towards white over the spectrum)	0	255
6	Colour	Sixth light (Red towards white over the spectrum)	0	255
7	Colour	Seventh Light (Red towards white over the spectrum)	0	255
8	Colour	Eight Light (Red towards white over the spectrum)	0	255
9	Colour	Ninth Light (Red towards white over the spectrum)	0	255
10	Colour	Tenth light (Red towards white over the spectrum)	0	255
11	Colour	Eleventh Light (Red towards white over the spectrum)	0	255
12	Colour	Twelfth Light (Red towards white over the spectrum)	0	255
13	Colour	Thirteenth Light (Red towards white over the spectrum)	0	255
14	Colour	Fourteenth Light (Red towards white over the spectrum)	0	255

25-Channel mode

Channel	Name	Function	Min DMX	Max DMX
15	Colour	Fifteenth light (Red towards white over the spectrum)	0	255
16	Colour	Sixteenth Light (Red towards white over the spectrum)	0	255
17	Colour	Seventeenth Light (Red towards white over the spectrum)	0	255
18	Colour	Eighteenth Light (Red towards white over the spectrum)	0	255
19	Colour	Nineteenth Light (Red towards white over the spectrum)	0	255
20	Colour	Twentieth light (Red towards white over the spectrum)	0	255
21	Colour	Twenty-first Light (Red towards white over the spectrum)	0	255
22	Colour	Twenty-second Light (Red towards white over the spectrum)	0	255
23	Colour	Twenty-Third Light (Red towards white over the spectrum)	0	255
24	Colour	Twenty-Fourth Light (Red towards white over the spectrum)	0	255
25	Colour	Twenty-Fifth Light (Red towards white over the spectrum)	0	255

75-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Red1	Red 0-100% First LED	0	255
2	Green1	Green 0-100% First LED	0	255
3	Blue1	Blue 0-100% First LED	0	255
4	Red2	Red 0-100% Second LED	0	255
5	Green2	Green 0-100% Second LED	0	255
6	Blue2	Blue 0-100% Second LED	0	255
7	Red3	Red 0-100% Third LED	0	255
8	Green3	Green 0-100% Third LED	0	255
9	Blue3	Blue 0-100% Third LED	0	255
10	Red4	Red 0-100% Fourth LED	0	255
11	Green4	Green 0-100% Fourth LED	0	255
12	Blue4	Blue 0-100% Fourth LED	0	255
13	Red5	Red 0-100% Fifth LED	0	255
14	Green5	Green 0-100% Fifth LED	0	255
15	Blue5	Blue 0-100% Fifth LED	0	255
16	Red6	Red 0-100% Sixth LED	0	255
17	Green6	Green 0-100% Sixth LED	0	255
18	Blue6	Blue 0-100% Sixth LED	0	255
19	Red7	Red 0-100% Seventh LED	0	255
20	Green7	Green 0-100% Seventh LED	0	255
21	Blue7	Blue 0-100% Seventh LED	0	255

75-Channel mode

Channel	Name	Function	Min DMX	Max DMX
22	Red8	Red 0-100% Eight LED	0	255
23	Green8	Green 0-100% Eight LED	0	255
24	Blue8	Blue 0-100% Eight LED	0	255
25	Red9	Red 0-100% Ninth LED	0	255
26	Green9	Green 0-100% Ninth LED	0	255
27	Blue9	Blue 0-100% Ninth LED	0	255
28	Red10	Red 0-100% Tenth LED	0	255
29	Green10	Green 0-100% Tenth LED	0	255
30	Blue10	Blue 0-100% Tenth LED	0	255
31	Red11	Red 0-100% Eleventh LED	0	255
32	Green11	Green 0-100% Eleventh LED	0	255
33	Blue11	Blue 0-100% Eleventh LED	0	255
34	Red12	Red 0-100% Twelfth LED	0	255
35	Green12	Green 0-100% Twelfth LED	0	255
36	Blue12	Blue 0-100% Twelfth LED	0	255
37	Red13	Red 0-100% Thirteenth LED	0	255
38	Green13	Green 0-100% Thirteenth LED	0	255
39	Blue13	Blue 0-100% Thirteenth LED	0	255
40	Red14	Red 0-100% Fourteenth LED	0	255
41	Green14	Green 0-100% Fourteenth LED	0	255
42	Blue14	Blue 0-100% Fourteenth LED	0	255

75-Channel mode

Channel	Name	Function	Min DMX	Max DMX
43	Red15	Red 0-100% Fifteenth LED	0	255
44	Green15	Green 0-100% Fifteenth LED	0	255
45	Blue15	Blue 0-100% Fifteenth LED	0	255
46	Red16	Red 0-100% Sixteenth LED	0	255
47	Green16	Green 0-100% Sixteenth LED	0	255
48	Blue16	Blue 0-100% Sixteenth LED	0	255
49	Red17	Red 0-100% Seventeenth LED	0	255
50	Green17	Green 0-100% Seventeenth LED	0	255
51	Blue17	Blue 0-100% Seventeenth LED	0	255
52	Red18	Red 0-100% Eighteenth LED	0	255
53	Green18	Green 0-100% Eighteenth LED	0	255
54	Blue18	Blue 0-100% Eighteenth LED	0	255
55	Red19	Red 0-100% Nineteenth LED	0	255
56	Green19	Green 0-100% Nineteenth LED	0	255
57	Blue19	Blue 0-100% Nineteenth LED	0	255
58	Red20	Red 0-100% Twentieth LED	0	255
59	Green20	Green 0-100% Twentieth LED	0	255
60	Blue20	Blue 0-100% Twentieth LED	0	255
61	Red21	Red 0-100% Twenty-First LED	0	255
62	Green21	Green 0-100% Twenty-First LED	0	255

75-Channel mode

Channel	Name	Function	Min DMX	Max DMX
63	Blue21	Blue 0-100% Twenty-First LED	0	255
64	Red22	Red 0-100% Twenty-Second LED	0	255
65	Green22	Green 0-100% Twenty-Second LED	0	255
66	Blue22	Blue 0-100% Twenty-Second LED	0	255
67	Red23	Red 0-100% Twenty-Third LED	0	255
68	Green23	Green 0-100% Twenty-Third LED	0	255
69	Blue23	Blue 0-100% Twenty-Third LED	0	255
70	Red24	Red 0-100% Twenty-Fourth LED	0	255
71	Green24	Green 0-100% Twenty-Fourth LED	0	255
72	Blue24	Blue 0-100% Twenty-Fourth LED	0	255
73	Red25	Red 0-100% Twenty-Fifth LED	0	255
74	Green25	Green 0-100% Twenty-Fifth LED	0	255
75	Blue25	Blue 0-100% Twenty-Fifth LED	0	255

100-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Red1	Red 0-100% First LED	0	255
2	Green1	Green 0-100% First LED	0	255
3	Blue1	Blue 0-100% First LED	0	255
4	Amber1	Amber 0-100% First LED	0	255
5	Red2	Red 0-100% Second LED	0	255
6	Green2	Green 0-100% Second LED	0	255
7	Blue2	Blue 0-100% Second LED	0	255
8	Amber2	Amber 0-100% Second LED	0	255
9	Red3	Red 0-100% Third LED	0	255
10	Green3	Green 0-100% Third LED	0	255
11	Blue3	Blue 0-100% Third LED	0	255
12	Amber3	Amber 0-100% Third LED	0	255
13	Red4	Red 0-100% Fourth LED	0	255
14	Green4	Green 0-100% Fourth LED	0	255
15	Blue4	Blue 0-100% Fourth LED	0	255
16	Amber4	Amber 0-100% Fourth LED	0	255
17	Red5	Red 0-100% Fifth LED	0	255
18	Green5	Green 0-100% Fifth LED	0	255
19	Blue5	Blue 0-100% Fifth LED	0	255
20	Amber5	Amber 0-100% Fifth LED	0	255
21	Red6	Red 0-100% Sixth LED	0	255

100-Channel mode

Channel	Name	Function	Min DMX	Max DMX
22	Green6	Green 0-100% Sixth LED	0	255
23	Blue6	Blue 0-100% Sixth LED	0	255
24	Amber6	Amber 0-100% Sixth LED	0	255
25	Red7	Red 0-100% Seventh LED	0	255
26	Green7	Green 0-100% Seventh LED	0	255
27	Blue7	Blue 0-100% Seventh LED	0	255
28	Amber7	Amber 0-100% Seventh LED	0	255
29	Red8	Red 0-100% Eighth LED	0	255
30	Green8	Green 0-100% Eighth LED	0	255
31	Blue8	Blue 0-100% Eighth LED	0	255
32	Amber8	Amber 0-100% Eighth LED	0	255
33	Red9	Red 0-100% Ninth LED	0	255
34	Green9	Green 0-100% Ninth LED	0	255
35	Blue9	Blue 0-100% Ninth LED	0	255
36	Amber9	Amber 0-100% Ninth LED	0	255
37	Red10	Red 0-100% Tenth LED	0	255
38	Green10	Green 0-100% Tenth LED	0	255
39	Blue10	Blue 0-100% Tenth LED	0	255
40	Amber10	Amber 0-100% Tenth LED	0	255
41	Red11	Red 0-100% Eleventh LED	0	255

100-Channel mode

Channel	Name	Function	Min DMX	Max DMX
42	Green11	Green 0-100% Eleventh LED	0	255
43	Blue11	Blue 0-100% Eleventh LED	0	255
44	Amber11	Amber 0-100% Eleventh LED	0	255
45	Red12	Red 0-100% Twelfth LED	0	255
46	Green12	Green 0-100% Twelfth LED	0	255
47	Blue12	Blue 0-100% Twelfth LED	0	255
48	Amber12	Amber 0-100% Twelfth LED	0	255
49	Red13	Red 0-100% Thirteenth LED	0	255
50	Green13	Green 0-100% Thirteenth LED	0	255
51	Blue13	Blue 0-100% Thirteenth LED	0	255
52	Amber13	Amber 0-100% Thirteenth LED	0	255
53	Red14	Red 0-100% Fourteenth LED	0	255
54	Green14	Green 0-100% Fourteenth LED	0	255
55	Blue14	Blue 0-100% Fourteenth LED	0	255
56	Amber14	Amber 0-100% Fourteenth LED	0	255
57	Red15	Red 0-100% Fifteenth LED	0	255
58	Green15	Green 0-100% Fifteenth LED	0	255
59	Blue15	Blue 0-100% Fifteenth LED	0	255
60	Amber15	Amber 0-100% Fifteenth LED	0	255
61	Red16	Red 0-100% Sixteenth LED	0	255

100-Channel mode

Channel	Name	Function	Min DMX	Max DMX
62	Green16	Green 0-100% Sixteenth LED	0	255
63	Blue16	Blue 0-100% Sixteenth LED	0	255
64	Amber16	Amber 0-100% Sixteenth LED	0	255
65	Red17	Red 0-100% Seventeenth LED	0	255
66	Green17	Green 0-100% Seventeenth LED	0	255
67	Blue17	Blue 0-100% Seventeenth LED	0	255
68	Amber17	Amber 0-100% Seventeenth LED	0	255
69	Red18	Red 0-100% Eighteenth LED	0	255
70	Green18	Green 0-100% Eighteenth LED	0	255
71	Blue18	Blue 0-100% Eighteenth LED	0	255
72	Amber18	Amber 0-100% Eighteenth LED	0	255
73	Red19	Red 0-100% Nineteenth LED	0	255
74	Green19	Green 0-100% Nineteenth LED	0	255
75	Blue19	Blue 0-100% Nineteenth LED	0	255
76	Amber19	Amber 0-100% Nineteenth LED	0	255
77	Red20	Red 0-100% Twentieth LED	0	255
78	Green20	Green 0-100% Twentieth LED	0	255
79	Blue20	Blue 0-100% Twentieth LED	0	255
80	Amber20	Amber 0-100% Twentieth LED	0	255
81	Red21	Red 0-100% Twenty-First LED	0	255

100-Channel mode

Channel	Name	Function	Min DMX	Max DMX
82	Green21	Green 0-100% Twenty-First LED	0	255
83	Blue21	Blue 0-100% Twenty-First LED	0	255
84	Amber21	Amber 0-100% Twenty-First LED	0	255
85	Red22	Red 0-100% Twenty-Second LED	0	255
86	Green22	Green 0-100% Twenty-Second LED	0	255
87	Blue22	Blue 0-100% Twenty-Second LED	0	255
88	Amber22	Amber 0-100% Twenty-Second LED	0	255
89	Red23	Red 0-100% Twenty-Third LED	0	255
90	Green23	Green 0-100% Twenty-Third LED	0	255
91	Blue23	Blue 0-100% Twenty-Third LED	0	255
92	Amber23	Amber 0-100% Twenty-Third LED	0	255
93	Red24	Red 0-100% Twenty-Fourth LED	0	255
94	Green24	Green 0-100% Twenty-Fourth LED	0	255
95	Blue24	Blue 0-100% Twenty-Fourth LED	0	255
96	Amber24	Amber 0-100% Twenty-Fourth LED	0	255
97	Red25	Red 0-100% Twenty-Fifth LED	0	255
98	Green25	Green 0-100% Twenty-Fifth LED	0	255
99	Blue25	Blue 0-100% Twenty-Fifth LED	0	255
100	Amber25	Amber 0-100% Twenty-Fifth LED	0	255

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Control	OFF	0	255
	Control	ON	0	255
	Number Macros	Number Show - Start Mode	0	255
	Letter Macros	Letter Show - Start mode	0	255
	Control	Sound Control - mode 1	0	255
	Control	Sound Control - mode 2	0	255
2	Number Macro 1	0	0	24
	Number Macro 2	1	25	49
	Number Macro 3	2	50	74
	Number Macro 4	3	75	99
	Number Macro 5	4	100	124
	Number Macro 6	5	125	149
	Number Macro 7	6	150	174
	Number Macro 8	7	175	199
	Number Macro 9	8	200	224
	Number Macro 10	9	225	255
	Letter Macro 1	A	0	9
	Letter Macro 2	B	10	19
	Letter Macro 3	C	20	29
	Letter Macro 4	D	30	39
	Letter Macro 5	E	40	49
	Letter Macro 6	F	50	59
	Letter Macro 7	G	60	69
	Letter Macro 8	H	70	79

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
2	Letter Macro 9	I	80	89
	Letter Macro 10	J	90	99
	Letter Macro 11	K	100	109
	Letter Macro 12	L	110	119
	Letter Macro 13	M	120	129
	Letter Macro 14	N	130	139
	Letter Macro 15	O	140	149
	Letter Macro 16	P	150	159
	Letter Macro 17	Q	160	169
	Letter Macro 18	R	170	179
	Letter Macro 19	S	180	189
	Letter Macro 20	T	190	199
	Letter Macro 21	U	200	209
	Letter Macro 22	V	210	219
	Letter Macro 23	W	220	229
	Letter Macro 24	X	230	239
	Letter Macro 25	Y	240	249
	Letter Macro 26	Z	250	255
	Sound Effect Macro 1	Sound Effect 1	0	16
	Sound Effect Macro 2	Sound Effect 2	17	33
	Sound Effect Macro 3	Sound Effect 3	34	50
	Sound Effect Macro 4	Sound Effect 4	51	67
	Sound Effect Macro 5	Sound Effect 5	68	84
	Sound Effect Macro 6	Sound Effect 6	85	101
	Sound Effect Macro 7	Sound Effect 7	102	118
	Sound Effect Macro 8	Sound Effect 8	119	135

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
2	Sound Effect Macro 9	Sound Effect 9	136	152
	Sound Effect Macro 10	Sound Effect 10	153	169
	Sound Effect Macro 11	Sound Effect 11	170	186
	Sound Effect Macro 12	Sound Effect 12	187	203
	Sound Effect Macro 13	Sound Effect 13	204	220
	Sound Effect Macro 14	Sound Effect 14	221	237
	Sound Effect Macro 15	Sound Effect 15	238	255
3	Colour	Colour select (Red towards white over the spectrum)	0	255
4	Dimmer	Dimmer (All)	0	255
5	Strobe Speed	Slow to Fast	0	255
6	Red1	Red 0-100% First LED	0	255
7	Green1	Green 0-100% First LED	0	255
8	Blue1	Blue 0-100% First LED	0	255
9	Amber1	Amber 0-100% First LED	0	255
10	Red2	Red 0-100% Second LED	0	255
11	Green2	Green 0-100% Second LED	0	255
12	Blue2	Blue 0-100% Second LED	0	255
13	Amber2	Amber 0-100% Second LED	0	255
14	Red3	Red 0-100% Third LED	0	255
15	Green3	Green 0-100% Third LED	0	255

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
16	Blue3	Blue 0-100% Third LED	0	255
17	Amber3	Amber 0-100% Third LED	0	255
18	Red4	Red 0-100% Fourth LED	0	255
19	Green4	Green 0-100% Fourth LED	0	255
20	Blue4	Blue 0-100% Fourth LED	0	255
21	Amber4	Amber 0-100% Fourth LED	0	255
22	Red5	Red 0-100% Fifth LED	0	255
23	Green5	Green 0-100% Fifth LED	0	255
24	Blue5	Blue 0-100% Fifth LED	0	255
25	Amber5	Amber 0-100% Fifth LED	0	255
26	Red6	Red 0-100% Sixth LED	0	255
27	Green6	Green 0-100% Sixth LED	0	255
28	Blue6	Blue 0-100% Sixth LED	0	255
29	Amber6	Amber 0-100% Sixth LED	0	255
30	Red7	Red 0-100% Seventh LED	0	255
31	Green7	Green 0-100% Seventh LED	0	255
32	Blue7	Blue 0-100% Seventh LED	0	255
33	Amber7	Amber 0-100% Seventh LED	0	255
34	Red8	Red 0-100% Eighth LED	0	255

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
35	Green8	Green 0-100% Eight LED	0	255
36	Blue8	Blue 0-100% Eight LED	0	255
37	Amber8	Amber 0-100% Eight LED	0	255
38	Red9	Red 0-100% Ninth LED	0	255
39	Green9	Green 0-100% Ninth LED	0	255
40	Blue9	Blue 0-100% Ninth LED	0	255
41	Amber9	Amber 0-100% Ninth LED	0	255
42	Red10	Red 0-100% Tenth LED	0	255
43	Green10	Green 0-100% Tenth LED	0	255
44	Blue10	Blue 0-100% Tenth LED	0	255
45	Amber10	Amber 0-100% Tenth LED	0	255
46	Red11	Red 0-100% Eleventh LED	0	255
47	Green11	Green 0-100% Eleventh LED	0	255
48	Blue11	Blue 0-100% Eleventh LED	0	255
49	Amber11	Amber 0-100% Eleventh LED	0	255
50	Red12	Red 0-100% Twelfth LED	0	255
51	Green12	Green 0-100% Twelfth LED	0	255
52	Blue12	Blue 0-100% Twelfth LED	0	255
53	Amber12	Amber 0-100% Twelfth LED	0	255
54	Red13	Red 0-100% Thirteenth LED	0	255

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
55	Green13	Green 0-100% Thirteenth LED	0	255
56	Blue13	Blue 0-100% Thirteenth LED	0	255
57	Amber13	Amber 0-100% Thirteenth LED	0	255
58	Red14	Red 0-100% Fourteenth LED	0	255
59	Green14	Green 0-100% Fourteenth LED	0	255
60	Blue14	Blue 0-100% Fourteenth LED	0	255
61	Amber14	Amber 0-100% Fourteenth LED	0	255
62	Red15	Red 0-100% Fifteenth LED	0	255
63	Green15	Green 0-100% Fifteenth LED	0	255
64	Blue15	Blue 0-100% Fifteenth LED	0	255
65	Amber15	Amber 0-100% Fifteenth LED	0	255
66	Red16	Red 0-100% Sixteenth LED	0	255
67	Green16	Green 0-100% Sixteenth LED	0	255
68	Blue16	Blue 0-100% Sixteenth LED	0	255
69	Amber16	Amber 0-100% Sixteenth LED	0	255
70	Red17	Red 0-100% Seventeenth LED	0	255
71	Green17	Green 0-100% Seventeenth LED	0	255
72	Blue17	Blue 0-100% Seventeenth LED	0	255
73	Amber17	Amber 0-100% Seventeenth LED	0	255
74	Red18	Red 0-100% Eighteenth LED	0	255

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
75	Green18	Green 0-100% Eighteenth LED	0	255
76	Blue18	Blue 0-100% Eighteenth LED	0	255
77	Amber18	Amber 0-100% Eighteenth LED	0	255
78	Red19	Red 0-100% Nineteenth LED	0	255
79	Green19	Green 0-100% Nineteenth LED	0	255
80	Blue19	Blue 0-100% Nineteenth LED	0	255
81	Amber19	Amber 0-100% Nineteenth LED	0	255
82	Red20	Red 0-100% Twentieth LED	0	255
83	Green20	Green 0-100% Twentieth LED	0	255
84	Blue20	Blue 0-100% Twentieth LED	0	255
85	Amber20	Amber 0-100% Twentieth LED	0	255
86	Red21	Red 0-100% Twenty-First LED	0	255
87	Green21	Green 0-100% Twenty-First LED	0	255
88	Blue21	Blue 0-100% Twenty-First LED	0	255
89	Amber21	Amber 0-100% Twenty-First LED	0	255
90	Red22	Red 0-100% Twenty-Second LED	0	255
91	Green22	Green 0-100% Twenty-Second LED	0	255
92	Blue22	Blue 0-100% Twenty-Second LED	0	255
93	Amber22	Amber 0-100% Twenty-Second LED	0	255
94	Red23	Red 0-100% Twenty-Third LED	0	255

105-Channel mode

Channel	Name	Function	Min DMX	Max DMX
95	Green23	Green 0-100% Twenty-Third LED	0	255
96	Blue23	Blue 0-100% Twenty-Third LED	0	255
97	Amber23	Amber 0-100% Twenty-Third LED	0	255
98	Red24	Red 0-100% Twenty-Fourth LED	0	255
99	Green24	Green 0-100% Twenty-Fourth LED	0	255
100	Blue24	Blue 0-100% Twenty-Fourth LED	0	255
101	Amber24	Amber 0-100% Twenty-Fourth LED	0	255
102	Red25	Red 0-100% Twenty-Fifth LED	0	255
103	Green25	Green 0-100% Twenty-Fifth LED	0	255
104	Blue25	Blue 0-100% Twenty-Fifth LED	0	255
105	Amber25	Amber 0-100% Twenty-Fifth LED	0	255