




# B BLINDED1

## DMX Chart



### 3 DMX modes

- 1-Channel mode
- 2-Channel mode
- 4-Channel mode

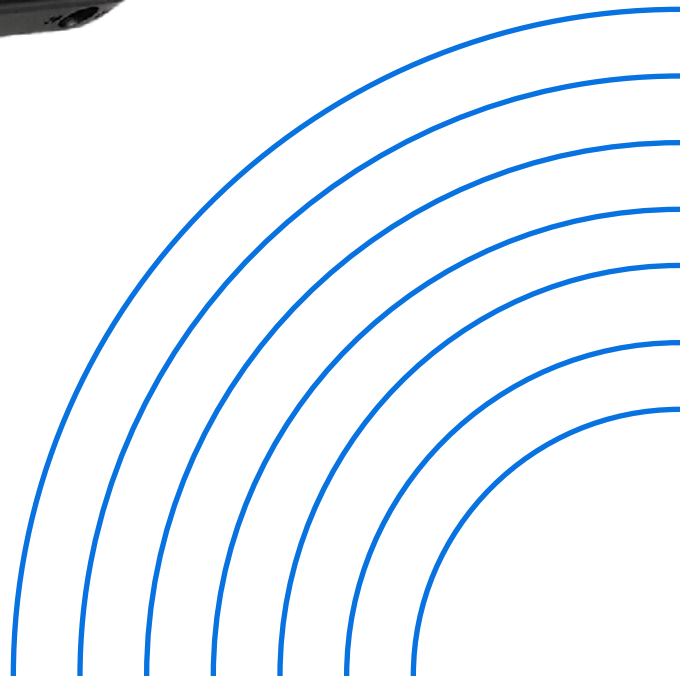

## 1-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer 0-100%	0	255

## 2-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer 0-100%	0	255
2	Strobe	Open	0	5
		Strobe Rate, slow-fast	6	123
		Open	124	127
		LED random strobe (speed1)	128	168
		LED random strobe (speed2)	169	208
		LED random strobe (speed3)	209	249
		Open	250	255

## 4-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer 0-100%	0	255
2	Dimmer Fine	Dimmer Fine	0	255
3	Strobe	Open	0	5
		Strobe Rate, slow-fast	6	123
		Open	124	127
		LED random strobe (speed1)	128	168
		LED random strobe (speed2)	169	208
		LED random strobe (speed3)	209	249
		Open	250	255

## 4-channel mode

4	Dimmer Speed	Default Setting	0	63
		Fast	64	127
		Smooth	128	191
		Tungsten Effect	192	255